

**SCOPSERV**  
INTERNATIONAL INC.

# How to Provision Bria SoftPhone

## Create a SIP Extension

- A SIP extension must be created before creating a provisioning object in the APS.
- Fill in each required tab and add the extension when done.

Extensions Manager: Phones: Extension 233 ◦ Add Multiple Extensions

Phones | Extension Groups | Pickup Groups | Speed Dial | Directory | Security (ACL) | Hints (Subscribe)

Phones

General | Authentication | Voicemail | Phone Options | Caller ID | Billing | User Options | Identity | Web Authentication | Security

\* Tenant : commzilla ▼

\* Type : SIP ▼

Create Template ? :

Phone Template : No Template ▼

\* Extension : 233

\* Class of Service : super ▼  
Default: default


Full Name : Bria  
*This field is also when creating Company Directory. You can use a '+' sign to split first and last name.*

Description :



## Add a New Provisioning System

- A SIP extension must be created before creating a provisioning object in the APS.
- Fill in each required tab and add the extension when done.
- The Username and Password fields are used to instruct Bria which provisioning file it must download
- The End User must enter these credentials when they launch their Bria soft phone
- The Configuration Server details in Bria must be entered in the format `http://pbx:5555/telephony/services/bria.php`

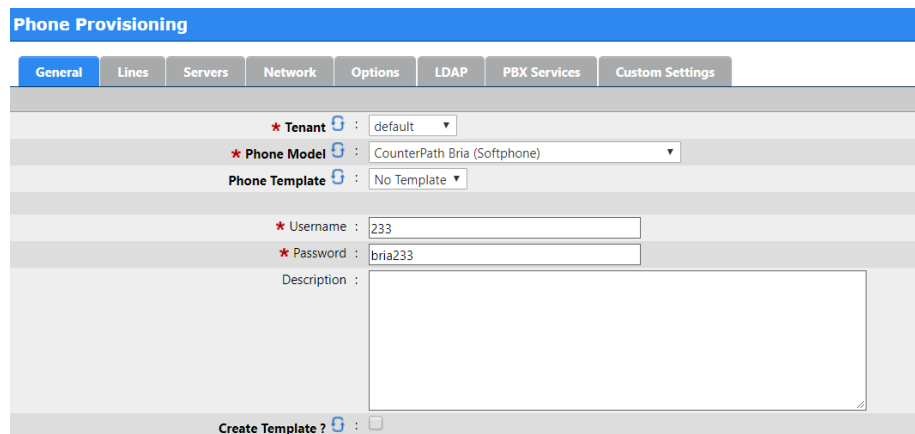


The screenshot shows the 'Phone Provisioning' configuration page with the following fields:

- Tenant: default
- Phone Model: CounterPath Bria (Softphone)
- Phone Template: No Template
- Username: 233
- Password: bria233
- Description: (empty text area)
- Create Template:



### Welcome to Bria 5!

Please select a profile from the menu below to complete the sign in.

Enter configuration server details 

`https://ipaddressofserver:5555/telephony/:`

233

••••••

Remember sign in information

Sign in automatically

Sign In

Cancel



## Line Assignment

- Assign the Extension to the Line 1 drop list
- Click on the Servers tab

Phone Provisioning Gateway Provisioning Firmware

### Phone Provisioning

General Lines Servers Network Options LDAP PBX Services Custom Settings

Line 1	<input type="text" value="233: Bria (SIP)"/>
	Default: none
Line 2	<input type="text" value="None"/>
	Default: none
Line 3	<input type="text" value="None"/>
	Default: none
Line 4	<input type="text" value="None"/>
	Default: none
Line 5	<input type="text" value="None"/>
	Default: none
Line 6	<input type="text" value="None"/>
	Default: none



## Servers

- Enter the SIP Server IP address in the Registrar/Proxy field
- Click Add when done
- Commit your APS changes after you add the APS object

Phone Provisioning	Gateway Provisioning	Firmware					
Phone Provisioning							
General	Lines	Servers	Network	Options	LDAP	PBX Services	Custom Settings
Registrar/Proxy :		<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="192"/>	<input type="text" value="254"/>	Port	<input type="text" value="5060"/>
Outbound Proxy :		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Port	<input type="text"/>
Registration Expire :		<input type="text" value="3600"/>					
		Default: 3600					
Keepalive (in Seconds) :		<input type="text" value="20"/>					





## Launch Bria

- Enter the End User details and allow Bria to download its configuration file and register with your server

